

Industrial PC Raspberry Pi OS on Raspberry Pi CM5 User Manual

For Raspberry Pi CM5 Products

Content can change at anytime, check our website for latest information of this product. **www.chipsee.com**

Contents

Raspberry Pi OS	4
1. Prepare for Developing	6
1.1. Prepare the Hardware	6
1.2. Prepare the Software	6
2. Connect to the Device	8
2.1. Connect From Serial Port	8
2.1.1. Enable/Disable Serial Debug Port	8
2.1.2. Connect the Wire	8
2.1.3. Linux and MacOS	10
2.1.4. Windows	12
2.2. Connect From Network (SSH)	14
2.2.1. Linux / MacOS	17
2.2.2. Windows	17
2.3. Connect with VNC Remote Desktop	19
3. Hardware Resources	22
3.1. Network	22
3.1.1. General	22
3.1.2. 4G/LTE (CAT4 Module)	23
3.1.3. 4G/LTE (CAT1 Module)	28
3.1.4. Ethernet and WiFi	30
3.2. GNSS/GPS	32
3.3. BUZZER	34
3.4. Backlight	35
3.5. Serial Port RS232 and RS485	36
3.6. CAN Bus	42
3.7. GPIO	44
3.7.1. Chipsee GPIO	45
3.7.2. GPIOD	45
3.8. Camera	48
3.9. Chipsee-init shell	49

4. Flashing an image to the	e Compute Module	50
4.1. Prerequisites		50
4.2. Usbboot		50
4.2.1. For Window		50
4.2.2. For Linux		52
4.2.3. For MacOS		55
4.3. Flash the eMMC		56
5. FAQ		59
6. Disclaimer		62
7. Technical Support		62

Raspberry Pi OS

Chipsee CM5 Industrial PC

User Manual for Raspberry Pi OS



This is the software manual for Chipsee Raspberry Pi CM5 industrial PC. If you've never developed on this hardware with a Raspberry Pi OS, this manual can get you started quickly.

Supported Chipsee PCs: all Chipsee Raspberry Pi CM5 based industrial PCs, including but not limited to:

- PPC-CM5-050 (CS12720RA5050P)
- EPC-CM5-070 (CS10600RA5070E)
- PPC-CM5-070 (CS10600RA5070P)
- PPC-CM5-070-D (CS10600RA5070P-D)
- PPC-CM5-101 (CS12800RA5101P)
- PPC-CM5-133 (CS19108RA5133)
- PPC-CM5-150 (CS10768RA5150)
- PPC-CM5-156 (CS19108RA5156)
- PPC-CM5-170 (CS12102RA5170)
- PPC-CM5-190 (CS12102RA5190)
- PPC-CM5-215 (CS19108RA5215)
- PPC-CM5-236 (CS19108RA5236)
- CS-CM5-BOX (CSRA5BOX)

Not supported:

• AIO-CM5-101 (CS12800RA5101A)

• AIO-CM5-156 (CS19108RA5156A)

Prepare for Developing

To power on the Chipsee industrial PC, you need a power adapter; then you may want to connect to this PC from your laptop or computer. Let's prepare some hardware and software.

Prepare the Hardware

Power Adapter:

- \cdot For products with a screen of 5" or 7" and BOX product, a power adapter between 9V \sim 30V DC output is required.
- For products with a screen of 10.1" or larger, you need a DC adapter with output between 15V ~ 30V.

For example, you can use a switching power DC adapter; or use a laptop adapter with proper voltage such as 18.5V, 19V etc when developing; or use a 12V power adapter from a used router for small screen products when developing.

To connect to the Chipsee industrial PC from your workstation, you can use:

- 1. A USB to serial cable (if you need serial debug, i.e. connect to RS232 serial debug port).
- 2. An Ethernet cable (if you want to SSH into the Chipsee industrial PC). You may also use WiFi if your Chipsee industrial PC supports WiFi, in this case you don't need the Ethernet cable.
- 3. A USB type-C cable (if you want to flash a new OS).

If you use the CM5 Lite module which doesn't have built-in eMMC storage, you also need one TF(Micro SD) card, 16GB at least, to boot your system.

Prepare the Software

Thanks to the Raspberry Pi OS, developing on a Chipsee industrial PC isn't really different from developing on a normal Raspberry Pi (except for optical isolated GPIO, RS232/485 serial ports and other hardware resources which a Pi doesn't have), you can use any developer software you're comfortable with.

The software listed below are not mandatory, they're recommendations because we find them easy to use:

 To SSH into a Chipsee industrial PC, you may find **PuTTY** or **XShell** on Windows handy; for Linux and macOS users, a terminal app should come with your OS out of box, like **Terminal/iTerm2** on macOS and **xterm** on Linux.

- 2. To use a remote desktop, you can download **VNC Viewer** on your laptop or PC.
- 3. 7zip for firmware image decompression, you could use your workstation's stock unzip program as well.
- 4. You can use **BalenaEtcher** or the official **Raspberry Pi Imager** to flash OS to the machine.
- 5. **Rpiboot for Windows**, or **Rpiboot for other platforms** to let your host machine detect the Chipsee industrial Pi eMMC as a USB device.

Note

• In this documentation, all the commands are executed with **root** user privileges.

Connect to the Device

There are 3 ways to connect to the device from your workstation:

- 1. From Serial RS232 port
- 2. From Ethernet or Wi-Fi (SSH)
- 3. From Ethernet or Wi-Fi (Remote Desktop/VNC)

Let's take a look at these connecting methods one by one.

Connect From Serial Port

[Cheatsheet for experienced developers: username is **pi**, password is **raspberry**, pin is **RS232_0**]

Enable/Disable Serial Debug Port

By default serial debug is enabled, you don't have to do anything to use the RS232_0 as a serial debug port. If you need to disable the debug function for this port to use a normal serial function instead, you could edit the */boot/firmware/cmdline.txt* file in the Raspberry Pi OS.

By default the file looks like this:

```
pi@raspberrypi:~ $ cat /boot/firmware/cmdline.txt
console=ttyAMA0,115200 console=tty1 root=PARTUUID=70b1faa5-02 rootfstype=ext4 fs
ck.repair=yes rootwait quiet splash plymouth.ignore-serial-consoles vt.global_cu
rsor_default=0 loglevel=0 cfg80211.ieee80211_regdom=CN
```

To disable debug: remove *console=ttyAMA0,115200* , reboot.

To enable debug: add *console=ttyAMA0,115200* back, reboot.

🛕 Warning

Please don't use the *raspi-config* to toggle the serial debug function switch. Because the official Pi OS uses "serial0" TTL debug port instead of "ttyAMA0" (the one we use here), which will not work for the "RS232_0" serial debug port. If you happen to have disabled the serial debug in *raspi-config*, you can manually enable it with the method above.

Connect the Wire

In our pre-built Raspberry Pi OS, the RS232_0 serves as a serial debug port. We can connect a RS232 cable between the Chipsee industrial PC and our workstation, allowing us to control the Chipsee industrial PC from our workstation.

To get started, you need a USB to serial cable, we will use a USB Type-C to DB-9 cable as an example, you can use a USB-A cable as well, you need to plug the USB end to your workstation, and the serial end to the Chipsee device.

I will plug the USB Type-C port to a Mac (Windows and Linux work fine too), and then I would use three female to female dupont wires, to connect 3 of the DB-9 pins to GND and RS232_0 (RX and TX) pins of my Chipsee industrial PC.




Use a USB to Serial Cable to Connect the Chipsee Industrial PC with Your Workstation

Take a look at the image below, this is the 10.1" product, if your product has a different screen size, check out the hardware document to find out which pins are RS232_0 TX and RX.



Each hardware doc has a "RS232/RS485/CAN" section, it lists which is the RS232_0 TX and RX in the image and the table of their respective docs. Find your model here (Industrial PCs Powered by Raspberry Pi) and scroll to the "RS232/RS485/CAN" section to check out.

You should connect the DB-9's RX to the device's TX, and DB-9's TX to the device's RX, you should also connect their GNDs (the white wire).

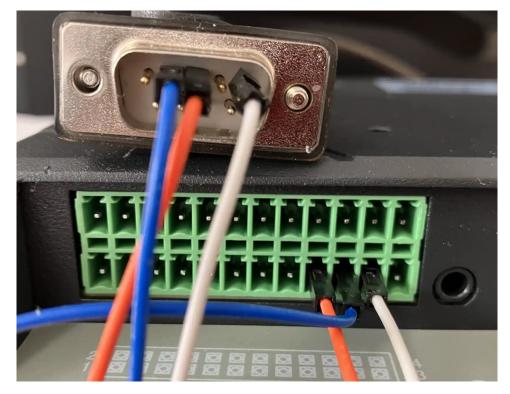

Connect 3 Pins with Dupont Wires (or with a phoenix connector)

Linux and MacOS

1. For **MacOS and Linux** users, you will need a program called **screen**. It should be already installed on most MacOS and Linux distributions(if the screen program is not installed on your computer, you can search how to install it, for example, "apt install screen" on Debian). Open your terminal and type *screen -v*. If the *screen* program is already installed in your computer, you should see a version number, like that in the image below:



Confirm You Have the Screen Program (MacOS & Linux)

2. Because the USB end of the cable is plugged into our workstation, we need to know which USB device it is in Linux/MacOS. We can find it out by testing:

ls /dev/tty*

You might see many *tty* devices listed in your terminal, and cannot decide which is your USB to RS232 cable. Here is a tip: you can unplug the cable first, type the command to see what is listed in the OS. Then you plug it back in, and test again, to see what has recently appeared. The difference between the two should be your cable. In the image below, we found the */dev/tty.usbserial-10* is our USB to RS232 cable.



Find Out Which Device is Your USB to Serial Cable

1. You can put the device name you found to the screen program as an argument. To connect to the device (115200 is the default baud rate of the device):

```
screen /dev/tty.usbserial-10 115200
```

2. When the prompt asks you to login, type the user name **pi**, its password is **raspberry**:

```
1 raspberrypi login: pi
2 pi@raspberrypi:~$ ls /
3 bin
        dev home lost+found
                                mnt
                                      proc
                                            run
                                                  srv
                                                        tmp
                                                             var
4 boot etc lib
                   media
                                opt
                                      root
                                            sbin
                                                  SVS
                                                        usr
5 pi@raspberrypi:~$
```

3. If there is a blank/white screen, you can hit Enter or type some commands to see if you can interact with the device. In the image below, the device responds to my */s* command.

```
🚞 finn — screen /dev/tty.usbserial-2120 115200 — screen — screen /dev/tty.us
raspberrypi login: pi
Password:
Linux raspberrypi 6.6.74+rpt-rpi-2712 #1 SMP PREEMPT Debian 1:6.6.74-1+rpt1 (2025-01-27) aarch64
The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.
Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
Last login: Tue Apr 1 08:54:16 BST 2025 from 192.168.50.171 on pts/1
SSH is enabled and the default password for the 'pi' user has not been changed.
This is a security risk - please login as the 'pi' user and type 'passwd' to set a new password.
pi@raspberrypi:~$ ls
Bookshelf Documents
                      Music
                                 Public
                                            Videos
Desktop
           Downloads Pictures Templates
pi@raspberrypi:~$ pwd
/home/pi
pi@raspberrypi:~$
```

The Screen Program Connects Your Workstation to the Industrial PC's Android Console

4. If you want to **exit** the screen program, you can press Ctr/+A then press K.

The program will ask you if you want to kill this window, then press y to exit the program.

📄 finn — screen /dev/tty.usbserial-2120 115200

pi@raspberrypi:~\$

Really kill this window [y/n]


Press "Ctrl + A" Follow by a "K" to Exit the Program

Windows

 For Windows users, you don't need to install a specific "driver" kind of thing for Windows to recognize a Chipsee PC, but before proceeding, you should see a COM port appear/disappear when plug/unplug your USB to serial cable in Windows.

Most USB to serial cables don't require driver installation on Windows10/11. But if you find your cable isn't recognizable by Windows, try checking the cable's manufacturer's website to learn more about it. Most of the time, simply doing a Windows update should do the trick, Windows can detect the cable's USB driver and install it for you.

- 2. You could install a program called **PuTTY** (or XShell etc), here is a link to download the software: https://www.putty.org/. If you're comfortable with other clients other than PuTTY, you can use those as well.
- 3. With PuTTY in your belt, let's find out which COM port your USB to RS232 cable is using. One tip is to check the *Microsoft Windows Device Manager* (right click Windows icon, select Device Manager). Check which COM port appears/disappears when you plug/unplug the USB to serial cable. And that COM port device should be your USB to RS232 cable. Keep a note of the COM port your serial cable is using, let's say it's "your-com", or "COM3" in this example.

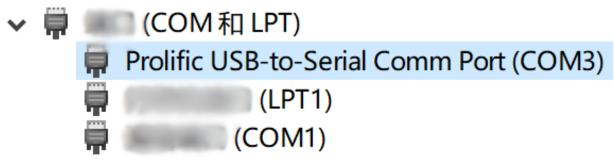


COM3 is the USB to Serial Cable

4. Open the PuTTY program, select Session, choose Serial in the radio buttons, and fill the COM port(your-com, or COM3 in this example) you found in the Microsoft Windows Device Manager, and choose 115200 as baud rate, then click Open.

Real Putty Configuration	×
Category: 	Basic options for your PuTTY session Specify the destination you want to connect to Serial line Speed COM3 115200 Connection type: Image: Speed Raw Telnet Rlogin Save Or Serial Load, save or delete a stored session Saved Sessions Default Settings Load Default Settings Delete
About	Always Never Only on clean exit

Input your-com in the Serial Line field, in our case COM3

5. Now you should be able to connect from your workstation to the device through the serial port. You can try to hit Enter, or type some commands, like *ls*, to see if the device replies to your commands. If the prompt asks you to login, type the user name **pi**, password is **raspberry**:

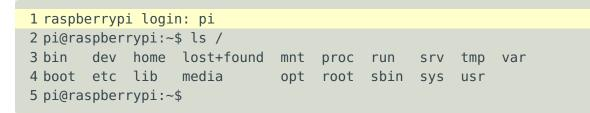


Connect From Network (SSH)

[Cheatsheet for experienced developers: username: pi, password: raspberry]

By default SSH and VNC are disabled for security reasons, you could enable them through:

 - raspi-config
- A GUI of raspi-config



	🚬 finn — ni@	raspberrypi: ~ – ssh pi@192.168.50.159 – 80×24
spberrv	Pi Compute Module 5	
	Deepherry Di Softw	are Configuration Tool (raspi-config)
1	System Options	Configure system settings
	Display Options	Configure display settings
	Interface Options	Configure connections to peripherals
	Performance Options	
	-	Configure language and regional settings
	Advanced Options	Configure advanced settings
	Update About raspi-config	Update this tool to the latest version Information about this configuration tool
7	About Taspi-connig	
	<select></select>	<finish></finish>

Go to TUI of raspi-config

Move to Interfaces

		finn — pi@raspbe	rrypi: ~ — ssh pi@192.168.50.159 — 80×24
		ry Pi Software (Configuration Tool (raspi-config)
	SSH DDi Connect		remote command line access using SSH
13	VNC	Enable/disable	Raspberry Pi Connect graphical remote desktop access
	SPI I2C		automatic loading of SPI kernel module automatic loading of I2C kernel module
			shell messages on the serial connection
	1-Wire		one-wire interface
18	Remote GPIO	Enable/disable	remote access to GPIO pins
		<select></select>	<back></back>

Hit Enter and Confirm to Enable SSH


You can SSH to the device when it's connected to the network, either through Wi-Fi or Ethernet.

First make sure you're connected through WiFi or Ethernet (to learn how, jump to the Network section below. Ethernet can be automatically detected, WiFi needs some configuration).

Then you can check the IP address with **ifconfig**:

Connect From Network (SSH)

Raspberry Pi OS on Raspberry Pi CM5 User Manual

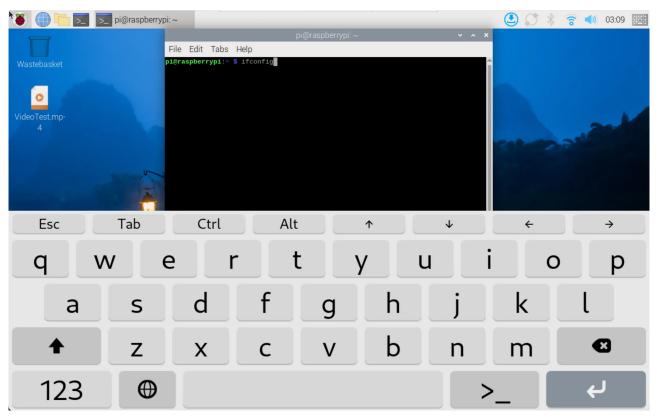

Hit Enter and Confirm to Enable SSH

```
1 pi@raspberrypi:~ $ ifconfig
 2 eth0: flags=4099<UP, BROADCAST, MULTICAST> mtu 1500
 3
        ether 2c:cf:67:b8:84:5c txqueuelen 1000 (Ethernet)
 4
        RX packets 0 bytes 0 (0.0 B)
        RX errors 0 dropped 0 overruns 0 frame 0
 5
        TX packets 0 bytes 0 (0.0 B)
 6
 7
        TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
        device interrupt 107
 8
 9
10 eth1: flags=4163<UP, BROADCAST, RUNNING, MULTICAST> mtu 1500
           inet 192.168.0.100 netmask 255.255.255.0 broadcast 192.168.0.255
11
           inet6 fe80::6523:8977:2a7a:d657 prefixlen 64 scopeid 0x20<link>
12
13
           inet6 240e:413:910:55:592d:e9eb:bf59:e0d4 prefixlen 64 scopeid
0x0<global>
           ether 22:89:84:6a:96:ab txqueuelen 1000
14
                                                     (Ethernet)
           RX packets 1108 bytes 1385789 (1.3 MiB)
15
           RX errors 202 dropped 0 overruns 0 frame 197
16
17
           TX packets 922 bytes 129320 (126.2 KiB)
18
          TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
19
20 lo: flags=73<UP,LOOPBACK,RUNNING> mtu 65536
           inet 127.0.0.1 netmask 255.0.0.0
21
           inet6 ::1 prefixlen 128 scopeid 0x10<host>
22
23
           loop txqueuelen 1000 (Local Loopback)
24
           RX packets 101 bytes 9544 (9.3 KiB)
25
           RX errors 0 dropped 0 overruns 0 frame 0
           TX packets 101 bytes 9544 (9.3 KiB)
26
27
           TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
28
```

29 wlan0: flags=4163 <up,broadcast,running,multicast> mtu 1500</up,broadcast,running,multicast>	
30 inet 192.168.50.159 netmask 255.255.255.0 broadcast 192.168	.50.255
31 inet6 fe80::99ba:18c8:40a8:8fc3 prefixlen 64 scopeid 0x20 <l< td=""><td>ink></td></l<>	ink>
<pre>32 ether 2c:cf:67:b8:84:5d txqueuelen 1000 (Ethernet)</pre>	
33 RX packets 189 bytes 53162 (51.9 KiB)	
34 RX errors 0 dropped 3 overruns 0 frame 0	
35 TX packets 80 bytes 13850 (13.5 KiB)	
36 TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0	

The **inet** line contains **your-ip** of eth0(wired) and wlan0(wireless). In the case above the IP address is 192.168.50.159 through **wlan0**.

If you're using Ethernet, it should be one of eth0(line 2) and eth1(line 9), depending on your device model. For example, on the dual-lan 7 inch product, LAN0 port is eth0, LAN1 port is eth1.

Then we can ssh from our workstation with this IP address.

Linux / MacOS

For Linux and MacOS users, you can use your terminal and type:

```
ssh pi@your-ip
# In our case, your-ip is 192.168.50.159
ssh pi@192.168.50.159
```

The username is pi, and the password is raspberry.

```
    → ~ ssh pi@192.168.50.159
    Linux raspberrypi 6.6.74+rpt-rpi-2712 #1 SMP PREEMPT Debian 1:6.6.74-1+rpt1 (202 5-01-27) aarch64
    The programs included with the Debian GNU/Linux system are free software;
```

The programs included with the Debian GNU/Linux system are free software; the exact distribution terms for each program are described in the individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent permitted by applicable law. Last login: Tue Apr 8 03:03:44 2025 from 192.168.50.171

SSH is enabled and the default password for the 'pi' user has not been changed. This is a security risk - please login as the 'pi' user and type 'passwd' to set a new password.

pi@raspberrypi:~ \$

SSH with your-ip

Windows

For Windows users using PuTTY, you can choose Session, input **username@your-ip** (in our case *pi@192.168.50.159*, yours should be different) in the Host Name field. Port Number

should remain 22, choose SSH as the connection type in the radio buttons, click "Open". The password is raspberry.

PuTTY Configura				?	×
Category:	username@y \	vour-ip			
 Session Logging Terminal Keyboard Bell Features Window Appearance Behaviour Translation Selection 		Basic options for your Pu pecify the destination you want to c Host Name (or IP address) Connection type: Raw Telnet Rlogin oad, save or delete a stored session Saved Sessions	onnect to 2 SSH	o ort 2	erial
Colours Connection Data Proxy Telnet Rlogin SSH Serial		Default Settings		Load Save Delet	e
		Close window on exit: Always Never Only	y on clea	n exit	
About	Help	Open		Cance	el

Input username@your-ip in the Host Name field, in our case pi@192.168.50.159

Now you have connected to the device through the network.


Connect with VNC Remote Desktop

[*Cheatsheet for experienced developer*: username: **pi**, password: **raspberry**, IP check: **ifconfig**, VNC port: **5900** (default port).]

We can have a graphical user interface if we use VNC to connect to our Chipsee industrial PC. This is handy if you're developing an HMI and want to test from your own laptop or computer. Here is how:

By default VNC is disabled, you can enable VNC from **sudo raspi-config** or in the GUI.

In the previous SSH section there are images of how to enable them through TUI, but you can also use the GUI program:

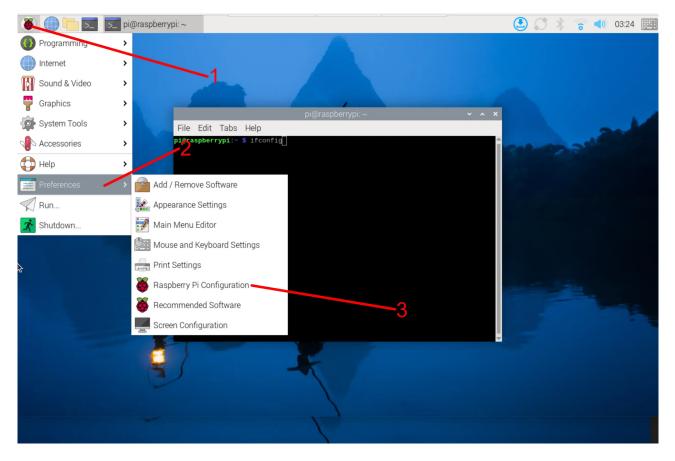


Go to GUI of raspi-config

🍯 🛑 🛅 🗾 pi@raspbe	errypi: ~	Raspberry Pi Confi	gu		,	🕒 🗘 🖇	ं 🜒	03:19
Wastebasket								
•	1		pi@raspber	rypi: ~	× •	×		
VideoTest.mp- 4	File Ed		Raspberry Pi Co		~ ^ X			
8	pi@raspt	System Display	Interfaces	Performance	Localisation	Calledon	28	
	s	SSH:						
3005		/NC:						
	s	SPI:						
	12	2C:						
	S	Serial Port:						
	s	Serial Console:						
	1	-Wire:			$\overline{\bigcirc}$			
	R	Remote GPIO:			\bigcirc			
				Cano	cel OK			
	5					_		
	1							
	5		K					

Enable VNC (or SSH if need so)

After enabling the VNC service, refer to the previous section to learn how to use **ifconfig** to find out your Chipsee industrial PC's IP address. In our case we get 192.168.50.159.

Then, for either Windows, macOS or Linux users, please open the VNC Viewer software on your laptop or PC. In the input area, which has a placeholder "Enter a VNC server address or search", you should input the IP address we obtained earlier: **your-ip**, in our case: 192.168.50.159 (**yours should be different**), and hit enter.

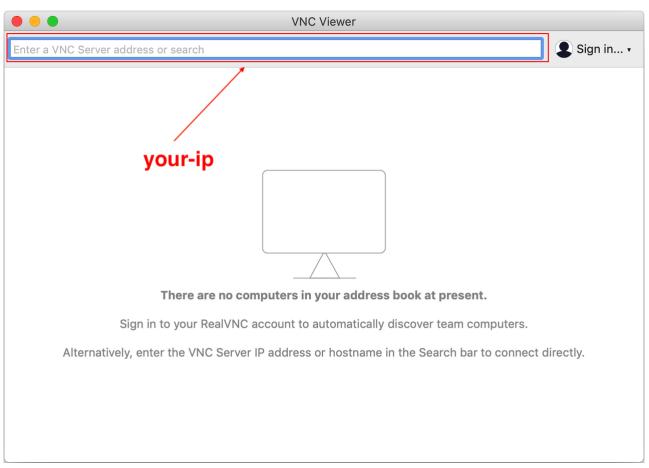

Change the input to your-ip, in our case 192.168.50.159

VNC Viewer might ask for your credentials, you should input our username and password, in our case: username: **pi**, password: **raspberry**. And then continue, VNC Viewer might tell you the connection is not encrypted, it's OK if you're in your local network.

Now we should see our Chipsee industrial PC's desktop GUI in the VNC Viewer software.

Hardware Resources

When you develop software for the Chipsee industrial PC, you can open the hardware document beside this software document, to aid you in wiring your devices.

Network

Note
If your product has a CAT-1 (Simcom 7670G) 4G/LTE modem, but SIM card is not inserted, WiFi/Ethernet traffic to the Internet will not be routed through Ethernet/WiFi by default. You can disable routing through 4G and use Ethernet/ WiFi instead with:
<pre># If your product only has 1 Ethernet port, eth1 is 4G device \$ sudo ip route del default via 192.168.0.1 dev eth1 # If your product has 2 Ethernet ports, eth2 is 4G device \$ sudo ip route del default via 192.168.0.1 dev eth2</pre>

This is useful when you're developing in house and don't want to use the 4G traffic.

More background:

Operating system will route traffic from **smaller metric** device first. To check the routing info:

\$ ip route

This will delete the route to eth1(4G/LTE) with metric 100, and then add a new one with metric of 700:

```
$ sudo ip route del default via 192.168.0.1 dev eth1
$ sudo ip route add default via 192.168.0.1 dev eth1 proto dhcp src 192.168.0.100 metric 700
```

General

To check the network interface information:

1\$	ifconfig
2	eth0: flags=4163 <up,broadcast,running,multicast> mtu 1500</up,broadcast,running,multicast>
3	inet 192.168.50.158 netmask 255.255.255.0 broadcast 192.168.50.255
4	inet6 fe80::16d:68d8:c0f5:1bd6
5	ether 2c:cf:67:b8:84:5c txqueuelen 1000 (Ethernet)
6	
7	eth1: flags=4163 <up,broadcast,running,multicast> mtu 1500</up,broadcast,running,multicast>
8	inet 192.168.0.100 netmask 255.255.255.0 broadcast 192.168.0.255
9	inet6 fe80::6523:8977:2a7a:d657
10	ether 22:89:84:6a:96:ab txqueuelen 1000 (Ethernet)
11	
12	lo: flags=73 <up,loopback,running> mtu 65536</up,loopback,running>
13	inet 127.0.0.1 netmask 255.0.0.0
14	inet6 ::1 prefixlen 128 scopeid 0x10 <host></host>
15	loop txqueuelen 1000 (Local Loopback)

16	
17	wlan0: flags=4163 <up,broadcast,running,multicast> mtu 1500</up,broadcast,running,multicast>
18	inet 192.168.50.159 netmask 255.255.255.0 broadcast 192.168.50.255
19	inet6 fe80::99ba:18c8:40a8:8fc3 prefixlen 64 scopeid 0x20 <link/>
20	ether 2c:cf:67:b8:84:5d txqueuelen 1000 (Ethernet)

You can find your ipv4 address of each interface after the **inet** line.

🔺 w	/arning
When i	inserting a SIM card, power off the device first. SIM card does not support hot plug.

4G/LTE (CAT4 Module)

For the CAT4 module (Quectel EC25).

pi@raspberr	ypi:~ \$ mmcli —m 0	
General		/org/freedesktop/ModemManager1/Modem/0 1ac7091779b95aa44ea3b27752d8fd3bd2ef247f
Hardware	model: firmware revision: carrier config: h/w revision: supported:	10000 gsm-umts, lte gsm-umts, lte
System	drivers: plugin: primary port:	/sys/devices/platform/axi/1000480000.usb/usb5/5-1 qmi_wwan, option quectel cdc-wdm0 cdc-wdm0 (qmi), ttyUSB0 (qcdm), ttyUSB1 (gps), ttyUSB2 (at), ttyUSB3 (at), wwan0 (net)
Numbers	own:	
Status	unlock retries:	
Modes		allowed: 2g; preferred: none allowed: 3g; preferred: none allowed: 4g; preferred: none allowed: 2g, 3g; preferred: 3g allowed: 2g, 3g; preferred: 2g allowed: 2g, 4g; preferred: 4g allowed: 2g, 4g; preferred: 2g allowed: 3g, 4g; preferred: 4g allowed: 3g, 4g; preferred: 3g allowed: 2g, 3g, 4g; preferred: 4g allowed: 2g, 3g, 4g; preferred: 2g allowed: 2g, 3g, 4g; preferred: 4g allowed: 2g, 3g, 4g; preferred: 4g allowed: 2g, 3g, 4g; preferred: 4g allowed: 2g, 3g, 4g; preferred: 4g
Bands		egsm, dcs, utran-1, utran-8, eutran-1, eutran-3, eutran-7, eutran-8, eutran-20, eutran-28, eutran-38, eutran-40, eutran-41 egsm, dcs, utran-1, utran-8, eutran-1, eutran-3, eutran-7, eutran-8, eutran-20, eutran-28, eutran-38, eutran-40, eutran-41
 IP	supported:	ipv4, ipv6, ipv4v6
 3GPP	imei: enabled locks: packet service state:	-
 3GPP EPS	ue mode of operation: initial bearer apn: initial bearer ip type:	ctlte
 SIM	· · · · · · · · · · · · · · · · · · ·	/org/freedesktop/ModemManager1/SIM/0 slot 1: /org/freedesktop/ModemManager1/SIM/0 (active)

Checking Modem with mmcli

If your product has a 4G modem, after inserting a SIM card, you can test the 4G/LTE with the *Chipsee Hardware Test* program first:

🐞 🌗 🛅 🗾 🥝 hardwaretest		🕒 🂭 拷 🛜 📣 02:00
Programming		
Internet >	hardwaretest Serial	CNO
Sound & Video	COM: ttyAMA0 • Stop Bit:	
Graphics		None OUT_1 High LOW IN_1 OUT_2 High LOW IN_2
Accessories 💦 📄 Archiver	Se	erialOpen OUT_3 O High O LOW IN_3
Help > Calculator	Se	enalSend AllHigh AllLow ReFresh
Preferences > Document Vie		erialClose CAN
Run File Manager		Statu:
Shutdown 🤇 hardwaretest	Se	erialClear CanNum:
IGNHelper		can0 👻
AudioLoop 🎸 Raspberry Pi	Diagnostics	CanStart
Volume: 🔤 😽 Raspberry Pi		4G Disable CanSend
Buzzer SD Card Copie	er	
Display Task Manage	er .61.57	CanStop
Terminal	.01.57	Board
Video 🖉 Text Editor		CS12800RA5101P Ver 5.8.4+gitb8bc55f
		EXIT

In the Hardware Test program, click *4G Enable*, then *Refresh* to check your connection information, you can also open the browser to test you're connected to the Internet.

To programmatically enable 4G:

In QMI mode you can use *quectel-CM* to enable 4G/LTE to connect to Internet:

sudo quectel-CM &

To test you're connected to the Internet:

```
ping 1.1.1.1
```

The program will set your DNS automatically.

```
root@raspberrypi:/home/pi# quectel-CM &
[2] 5247
root@raspberrypi:/home/pi# [04-24_10:02:20:877] Quectel_Linux_ConnectManager_SR01A01V21
[04-24_10:02:20:877] quectel-CM profile[1] = (null)/(null)/(null)/0, pincode = (null)
[04-24_10:02:20:877] Find gmichannel = /dev/cdc-wdm0
[04-24_10:02:20:877] Find usbnet_adapter = wwan0
[04-24_10:02:20:884] /proc/2890/fd/7 -> /dev/cdc-wdm0
[04-24_10:02:20:884] /proc/2890/exe -> /usr/libexec/qmi-proxy
[04-24_10:02:22:884] cdc_wdm_fd = 7
[04-24_10:02:22:983] Get clientWDS = 5
[04-24_10:02:23:015] Get clientDMS = 1
[04-24_10:02:23:047] Get clientNAS = 2
[04-24_10:02:23:079] Get clientUIM = 1
[04-24_10:02:23:111] Get clientWDA = 1
[04-24_10:02:23:143] requestBaseBandVersion EC25EUXGAR08A13M1G
[04-24_10:02:23:239] requestGetSIMStatus SIMStatus: SIM_READY
[04-24_10:02:23:303] requestGetProfile[1] ctlte///0
[04-24_10:02:23:337] requestRegistrationState2 MCC: 460, MNC: 11, PS: Attached, DataCap: LTE
[04-24_10:02:23:367] requestQueryDataCall ConnectionStatus: DISCONNECTED
[04-24_10:02:23:431] requestRegistrationState2 MCC: 460, MNC: 11, PS: Attached, DataCap: LTE
[04-24_10:02:23:463] requestSetupDataCall WdsConnectionIPv4Handle: 0x84751de0
[04-24_10:02:23:527] requestQueryDataCall ConnectionStatus: CONNECTED
udhcpc: started, v1.35.0
udhcpc: broadcasting discover
udhcpc: broadcasting select for 10.148.63.226, server 10.148.63.225
udhcpc: lease of 10.148.63.226 obtained from 10.148.63.225, lease time 7200
root@raspberrypi:/home/pi# ip route
default via 10.148.63.225 dev wwan0
default via 192.168.50.1 dev wlan0 proto dhcp src 192.168.50.159 metric 600
10.148.63.224/30 dev wwan0 proto kernel scope link src 10.148.63.226
```

192.168.50.0/24 dev wlan0 proto kernel scope link src 192.168.50.159 metric 600

Run quectel-CM to Enable 4G and Connect to the Internet

The *quectel-CM* program doesn't persist across reboot, you may consider creating a systemd service to auto start the *quectel-CM* program on boot, or run the *sudo quectel-CM* & command in your own application. There is a simple starting point:

```
# create a file /etc/systemd/system/quectel-cm.service
```

```
[Unit]
Description=Quectel Connection Manager
[Service]
Type=simple
ExecStartPre=/bin/sh -c 'until [ -e /dev/cdc-wdm0 ]; do sleep 1; done'
# give the modem some time to initialize
ExecStart=/usr/bin/quectel-CM
SyslogIdentifier=quectel-cm
KillMode=control-group
Restart=always
RestartSec=30
TimeoutStartSec=30
StandardOutput=journal
StandardError=journal
```

Network

```
[Install]
WantedBy=multi-user.target
```

Reload the systemd after creating or modifying *quectel-cm.service* :

sudo systemctl daemon-reload

Manually start/stop the service (enable/disable 4G):

sudo systemctl start quectel-cm.service
sudo systemctl stop quectel-cm.service

Check status and logs:

sudo systemctl status quectel-cm.service

Enable/disable autostart on boot:

sudo systemctl enable quectel-cm.service
sudo systemctl disable quectel-cm.service

Then you could have 4G enabled that persists across reboot, you can edit the /etc/system// system/quectel-cm.service file to meet your needs.

```
pi@raspberrypi:~ $ sudo systemctl status quectel-cm.service
quectel-cm.service - Quectel Connection Manager
     Loaded: loaded (/etc/systemd/system/quectel-cm.service; enabled; preset: enabled)
     Active: active (running) since Fri 2025-04-25 02:42:57 BST; 8min ago
    Process: 1736 ExecStartPre=/bin/sh -c until [ -e /dev/cdc-wdm0 ]; do sleep 1; done (code=exited, status=0/SUCCESS)
   Main PID: 1737 (quectel-CM)
      Tasks: 2 (limit: 4745)
       CPU: 33ms
     CGroup: /system.slice/quectel-cm.service
             -1737 /usr/bin/quectel-CM
Apr 25 02:42:57 raspberrypi systemd[1]: Starting quectel-cm.service - Quectel Connection Manager...
Apr 25 02:42:57 raspberrypi systemd[1]: Started quectel-cm.service - Quectel Connection Manager.
Apr 25 02:42:59 raspberrypi quectel-cm[1745]: udhcpc: started, v1.35.0
Apr 25 02:42:59 raspberrypi quectel-cm[1745]: udhcpc: broadcasting discover
Apr 25 02:42:59 raspberrypi quectel-cm[1745]: udhcpc: broadcasting select for 10.72.109.196, server 10.72.109.197
Apr 25 02:43:00 raspberrypi quectel-cm[1745]: udhcpc: lease of 10.72.109.196 obtained from 10.72.109.197, lease time 7200
pi@raspberrypi:~ $ ps -ef | grep quectel-CM
            1737
                      1 0 02:42 ?
                                           00:00:00 /usr/bin/quectel-CM
root
            2294
                  2225 0 02:51 pts/0
                                           00:00:00 grep --color=auto guectel-CM
pi
```

Use Systemd to Auto Start quectel-cm Program on System Boot to Auto Connect 4G/LTE

You can also use normal AT commands to check network information:

First listen the response from /dev/ttyUSB2 :

1 \$ cat /dev/ttyUSB2 &

To acquire IMEI:

```
1 $ echo -e "AT+GSN\r" > /dev/ttyUSB2
2
3 # Response:
4 868414063045508
5
6 OK
```

To check signal strength:

```
1 $ echo -e "AT+CSQ\r" > /dev/ttyUSB2
2
3 # Response:
4 +CSQ: 18,99 # strength: 18; ber: 99(99 means not known or not detectable)
5
6 0K
```

To switch to QMI device mode (default mode) if you switched to other mode accidentally:

```
1 echo -e 'AT+QCFG="usbnet",0\r' > /dev/ttyUSB2
2 echo -e 'AT+CFUN=1,1\r' > /dev/ttyUSB2
```

4G/LTE (CAT1 Module)

For the CAT1 module (Simcom 7670G).

If your product has a 4G modem, after inserting a SIM card, the 4G function should work out of box. The product uses RNDIS (Remote Network Driver Interface Specification) for 4G modem.

If you still have problems connecting with 4G, you can take a look at /opt/chipsee/test folder, unzip the /opt/chipsee/test/simcom-linux-4g with sudo tar -xzf simcom-linux-4g.tar.gz , there is a **README** file along with some scripts used to connect 4G.

```
pi@raspberrypi:/opt/chipsee/test $ ls
cantest gpiotest.sh quectel-linux-4g.tar.gz simcom-linux-4g simcom-linux-4g.tar.gz uarttest.txt
pi@raspberrypi:/opt/chipsee/test $ cd simcom-linux-4g/
pi@raspberrypi:/opt/chipsee/test/simcom-linux-4g $ ls
other-scripts ppp-peers ppp-scripts README
pi@raspberrypi:/opt/chipsee/test/simcom-linux-4g $
```

You can check the status of your modem with **mmcli** (ModemManager):

d),

In the highlighted lines, you can see that the 4G/LTE device is **eth1** on PPC-CM5-101 or larger screen models; in dual-lan PPC-CM5-070D the 4G will be **eth2**. The status shows the failed reason is "sim-missing" when a SIM card is not inserted.

When a sim card is inserted, 4G should work automatically.

```
🚞 finn — pi@raspberrypi: ~ — ssh pi@192.
pi@raspberrypi:~ $ mmcli -m 0
                              path: /org/freedesktop/ModemManager1/Modem/0
  General
                         device id: 18548870ac0b24e1ac6fb45d9e62a86b85443dfc
           I
  Hardware
                     manufacturer: SIMCOM INCORPORATED
                            model: SIM7670G-LNGV
                firmware revision: 2374B03SIM767XM5A
                        supported: gsm-umts
                          current: gsm-umts
                     equipment id: 864643060179290
  System
                           device: /sys/devices/platform/axi/1000480000.usb/usb5/5-1
                          drivers: cdc_acm, rndis_host
                           plugin: generic
                     primary port: ttyACM0
                             ports: eth1 (net), ttyACM0 (at), ttyACM1 (ignored), ttyACM2 (at)
  Numbers
           I
                               own: +861
  Status
                             state: disabled
                      power state: on
           I
  Modes
                         supported: allowed: any; preferred: none
                          current: allowed: any; preferred: none
           I
  IΡ
           supported: ipv4, ipv6, ipv4v6, non-ip
  3GPP
                              imei: 864643060179290
           3GPP EPS | ue mode of operation: csps-2
                 primary sim path: /org/freedesktop/ModemManager1/SIM/0
  SIM
           pi@raspberrypi:~ $ curl ifconfig.io
240e:412:900:
                      3159:9f82:e7d8
pi@raspberrypi:~ $
```

When 4G is connected, check Public IP with curl


Ethernet and WiFi

When you plug your Ethernet cable to the device, Ethernet should be connected automatically.

For connecting to WiFi, it's the same as normal Raspberry Pi's, you can refer to the Raspberry Pi's official documentation to learn how to use WiFi and Ethernet in the networking section: https://www.raspberrypi.com/documentation/computers/configuration.html#networking.

			٢ 🕙	*	6		09:59	
		Tu	ırn Off Wirele	ess LAN	N			
		~	-02	6	1 🕆			
	Connect to Hidden Wireless Network	Ad	lvanced Opti	ons	>			
	Create Wireless Hotspot							
	Add VPN Connection							
@	Connection Information	×						
	Edit Connections					2		

Method 1: Connecting WiFi from Desktop GUI

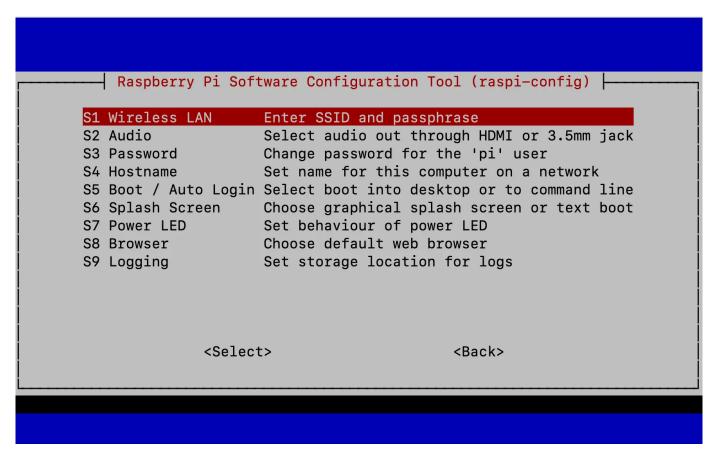

Method 2: Connecting WiFi from raspi-config TUI's System Options -> S1 Wireless LAN

From the terminal, you can use **nmcli** to configure the network, **nmcli** is the new default of Raspberry Pi OS. If the examples in the official Pi's documentation is not enough, you can also refer to the documents of the **nmcli** program.

```
pi@raspberrypi:~ $ nmcli radio wifi
enabled
pi@raspberrypi:~ $ sudo nmcli radio wifi on
pi@raspberrypi:~ $ nmcli dev wifi list
IN-USE BSSID
                          SSID
                                    MODE
                                           CHAN RATE
                                                            SIGNAL
                                                                    BARS
SECURITY
*
       04:42:1A:65:B3:10 chipsee Infra 8
                                                270 Mbit/s 50
                                                                          WPA2
pi@raspberrypi:~ $ sudo nmcli --ask dev wifi connect <your-ssid>
Password: ••••••
Device 'wlan0' successfully activated with
'c6052b81-03d4-44fc-97f9-28d5bb121750'.
```

Method 3: Connecting WiFi with nmcli

Note that **nmcli cannot manage 4G connections**.

GNSS/GPS

GPS is integrated in the CAT-4 4G/LTE Quectel EC25 module, if your product comes with the CAT-4 module, and a GPS antenna, you can enable the GPS feature.

You can test with the *Chipsee hardware test* program, click **GPS Enable** button, you should see some random code(GPS information) in the text box. Wait a few minutes for GPS to become stable.

		dwaretest		×
DateTime	Serial		GPIO	
2025 04 24 22 52 24	COM: ttyAMA0	▼ Stop Bit: 1 ▼	GPIO_OUT	GPIO_IN
2025-04-24 23:52:24	Baud: 115200	▼ Data Bit: 8 ▼		HIGH 🛑 LOW 🛑
Truch	Check Bit: None	▼ Flow: None ▼	OUT_1 OHigh	• LOW IN_1
TimeSet	Statu:		OUT_2 O High	LOW IN_2
LED		SerialOpen	OUT_3 High OUT_4 High	LOW IN_3 LOW IN 4
		SerialSend	AllHigh AllLow	ReFresh
LED1: ON OFF		SerialClose	CAN	
		SerialClear	Statu: CanNum:	
Sound	NetWork	1	can0 👻	
AudioLoop Audio	NetInfo		CanStart	
Volume:	3gnet • 46 Enabl	e 4G Disable	Canstart	
	GPS Enable	GPS Disable	CanSend	
Buzzer Enable	\$GPVTG,,T,,M,,N,,K,N*2C \$GPGSA,A,1,,,,,*32			
Display	\$GPGGA,,,,,0,,,,,*66 \$GPRMC,,V,,,,N,V*29		CanStop	
	\$GPVTG,,T,,M,,N,,K,N*2C \$GPGSA,A,1,,,,,*32		Board	
Video VideoLoop LCDTest	\$GPGGA,,,,,0,,,,,*66 \$GPRMC,,V,,,,N,V*29		CS12800RA5101P	
			Ver 5.8.4+gitb8bc55f	
				EXIT

Click GPS Enable

You can also use GPS programmatically with serial port.

GPS Port: /dev/ttyUSB1

AT port: **/dev/ttyUSB2**

In the first terminal, we use cat to listen for GPS info:

```
cat /dev/ttyUSB1
# hit Enter, the port will keep listening
# until any information comes to the port(after you send AT command to AT port)
```

In the second terminal, send AT instructions:

¢ microcom _s 0600 _p /dev/ttv/USB2

\$GPGSA, A, 3, 04, 09, 11, 12, 1			
	.4,17,19,20,22,,,,	1.1,0.7,0.8,1*27 cat /dev/ttyU	SB1 microcom –s 9600 -p /dev/ttyUSi
GPRMC,061327.00,A,43	,N,12	E,0.0,0.0,250425,7.9,W,A,V*54	
GPVTG,0.0,T,7.9,M,0.0,N			
GPGGA,061327.00,43	,N,12	E,1,09,0.7,215.1,M,11.0,M,,*66	
	<66		
GPGSV,4,3,13,03,15,043,		,25,00,331,,1*6E	ok □
\$GPGSV,4,2,13,17,50,		20,16,226,28,22,21,195,37,1*65	OK AT+QGPS=1
GPGSV,4,1,13,04,27,081,	31,09,28,120,	307,32,14,04,181,26,1*63	OK AT+QGPSCFG="gpsnmeatype",31
• • •	🚞 finn — pi@raspberrypi: ~	- – ssh pi@192.168.50.159 – 85×18	finn – pi@raspberrypi: ~ – ssh pi@192.168.50.159 – 85x44 ATE1
		-	s time to acquire satellites (can take 30s–2min cold start).
🧪 Note			
setting wil	"gpsnmeat l be save	<pre>sype",31 # Turn on al d to NVRAM, persists</pre>	l output type, GGA/RMC/GSV/GSA/VTG, this
	le uispla	ying. Hit Enter afte	

To disable GPS:

AT+QGPSEND # disable GPS

To exit microcom:

```
# Press:
# Ctrl + \
# Followed by:
quit
```

finn - pi@raspberrypi: ~ - ssh pi@192.168.50.159 - 85×44
foot@raspberrypi:/home/pi# microcom -s 9600 -p /dev/ttyUSB2
connected to /dev/ttyUSB2
Escape character: Ctrl-\
Type the escape character to get to the prompt.
Enter command. Try 'help' for a list of builtin commands
-> quit
exiting
root@raspberrypi:/home/pi#

Quit from microcom

BUZZER

The Chipsee industrial PC has one buzzer. We have created one symbol link to */dev/buzzer* . You can control it as follows:

```
$ echo 1 > /dev/buzzer # enable buzzer
$ echo 0 > /dev/buzzer # disable buzzer
```

Backlight

You can turn on or off backlight:

\$ pinctrl get 18 # get current backlight status # 18: op dh pd | hi // GPIO18 = output \$ pinctrl set 18 op dh # set backlight on \$ pinctrl set 18 op dl # set backlight off

Serial Port RS232 and RS485

Check the table below of the RS232/RS485 pin definition to wire your ports:

5 inch product

• PPC-CM5-050(CS12720RA5050P):

Pin Number	Definition	Description	OS Node
Pin 12	CAN1_H	CPU SPI0, CAN H signal	
Pin 11	CAN1_L	CPU SPIO, CAN L signal	CAN0
Pin 10	RS485_5-	CPU UART5, RS485 –(B) signal	
Pin 9	RS485_5+	CPU UART5, RS485 +(A) signal	/dev/ttyAMA4
Pin 8	RS485_3-	CPU UART3, RS485 –(B) signal	
Pin 7	RS485_3+	CPU UART3, RS485 +(A) signal	/dev/ttyAMA2
Pin 6	RS232_2_RXD	CPU UART2, RS232 RXD signal	
Pin 5	RS232_2_TXD	CPU UART2, RS232 TXD signal	/dev/ttyAMA1
Pin 4	RS232_0_RXD	CPU UART0, RS232 RXD signal, Debug Port	
Pin 3	RS232_0_TXD	CPU UART0, RS232 TXD signal Debug Port	/dev/ttyAMA0
Pin 2	GND	System Ground	
Pin 1	+5V	System +5V Power Output, No more than 1A Current output	

Table 483 RS232 / RS485 / CAN Pin Definition for 5 inch product

7 inch / Box products

- EPC-CM5-070 (CS10600RA5070E)
- PPC-CM5-070 (CS10600RA5070P)
- PPC-CM5-070-D (CS10600RA5070P-D)
- CS-CM5-BOX (CSRA5BOX):

П

RS232 / RS485 / CAN Pin Definition:					
Pin Number	Definition	Description	OS Node		
Pin 16	CAN_H	CPU SPI0, CAN BUS "H" signal	CAN0		
Pin 15	CAN_L	CPU SPI0, CAN BUS "L" signal			
Pin 14	RS485_5-	CPU UART5, RS485 –(B) signal	/dev/ ttyAMA4		
Pin 13	RS485_5+	CPU UART5, RS485 +(A) signal			
Pin 12	RS232_5_RXD	CPU UART5, RS232 RXD signal	/dev/ ttyAMA4		
Pin 11	RS232_5_TXD	CPU UART5, RS232 TXD signal			
Pin 10	RS485_3-	CPU UART3, RS485 –(B) signal	/dev/ ttyAMA2		
Pin 9	RS485_3+	CPU UART3, RS485 +(A) signal			
Pin 8	RS232_3_RXD	CPU UART3, RS232 RXD signal	/dev/ ttyAMA2		
Pin 7	RS232_3_TXD	CPU UART3, RS232 TXD signal			
Pin 6	RS232_2_RXD	CPU UART2, RS232 RXD signal	/dev/ ttyAMA1		
Pin 5	RS232_2_TXD	CPU UART2, RS232 TXD signal			
Pin 4	RS232_0_RXD	CPU UART0, RS232 RXD signal, Debug Port	/dev/ ttyAMA0		
Pin 3	RS232_0_TXD	CPU UART0, RS232 TXD signal, Debug Port			
Pin 2	GND	System Ground			
Pin 1	+5V	System +5V Power Output, No more than 1A Current output			

Table 484 RS232 / RS485 / CAN Pin Definition for 7 inch/Box products

10.1 inch and above products

- PPC-CM5-101 (CS12800RA5101P)
- PPC-CM5-133 (CS19108RA5133)
- PPC-CM5-150 (CS10768RA5150)
- PPC-CM5-156 (CS19108RA5156)
- PPC-CM5-170 (CS12102RA5170)
- PPC-CM5-190 (CS12102RA5190)
- PPC-CM5-215 (CS19108RA5215)
- PPC-CM5-236 (CS19108RA5236)



PIN1	PIN2	PIN3	PIN4	PIN5	PIN6	PIN7	PIN8	PIN9	PIN10	PIN11	PIN12
CAN_H	CAN_L	RS485_5B	RS485_5A	RS485_3B	RS485_3A	RS232_2RX	RS232_2TX	RS232_0RX	RS232_0TX	GND	VDD_5V

Pin Number	Definition	Description	OS Node
Pin 1	CAN_H	CPU SPI0, CAN H signal	
Pin 2	CAN_L	CPU SPIO, CAN L signal	CAN0
Pin 3	RS485_5-	CPU UART5, RS485 –(B) signal	
Pin 4	RS485_5+	CPU UART5, RS485 +(A) signal	/dev/ttyAMA4
Pin 5	RS485_3-	CPU UART3, RS485 –(B) signal	
Pin 6	RS485_3+	CPU UART3, RS485 +(A) signal	/dev/ttyAMA2
Pin 7	RS232_2_RXD	CPU UART2, RS232 RXD signal	
Pin 8	RS232_2_TXD	CPU UART2, RS232 TXD signal	/dev/ttyAMA1
Pin 9	RS232_0_RXD	CPU UART0, RS232 RXD signal, Debug Port	
Pin 10	RS232_0_TXD	CPU UART0, RS232 TXD signal Debug Port	/dev/ttyAMA0
Pin 11	GND	System Ground	

Pin Number	Definition	Description	OS Node
Pin 12	+5V	System +5V Power Output, No more than 1A Current output	

Table 485 RS232 / RS485 / CAN Pin Definition for 10.1 inch and above products

The 120 Ohm match resistor is **NOT** mounted on the RS485 port.

RS485 ports are half-duplex, the hardware can switch the Tx/Rx direction automatically. RS232 ports are full-duplex.

You can use **cutecom** to test the serial port, they're already installed. If not, you could install with:

\$ sudo apt-get install cutecom

Only root user can use the serial port:

\$ sudo cutecom

Apart from **cutecom**, you can also use the pre-installed HardwareTest program developed by Chipsee to test serial ports, for example, you've wired the serial cable on the RS232_0_RX, RS232_0_TX on the 10.1 inch product, then you can select "ttyAMA0" in "COM", click "SerialOpen".

Then you can use your workstation or another Chipsee PC to communicate with this product.

You may also wish to install a UART/COM Assistant software (such as COMTool) which has a GUI for testing.

	192.168.50.159 (Way	/NC) - RealVNC Viewer		~ _		CONTOURS.H.1	~ 😈 😡
🛅 🗾 🥢 hardwaretest				🗐 😣 🛛 Se	nd Receive	protocol 🔕 terminal 🔇 Graph	• UTF-8 •
	hardw	aretest		Connection		Message from serial by manual!!! Message from serial by manual!!!	
DateTime Choose the Po	offrial		GPIO	Serial	۲	Message from serial by manual!!! Message from serial by manual!!! Message from serial by manual!!!	
2025-04-15 02:44:47	Baud: 115200		_{GPIO_OUT} audrate Shou			Message from serial by manualIII Message from serial by manualIII Message from serial by manualIII Message from serial by manualIII Message from serial by manualIII	
TimeSet	Check Bit: None 👻	Flow: None *	OUT_2 0 F		115200 ~ 8 ~	Message from serial by manual!!! Message from serial by manual!!! Message from serial by manual!!! Message from serial by manual!!!	
ED	2025-04-15 02:44:46 ttyAMA0 Received:	SerialOpen	OUT_3 F		None v	Message from serial by manualiti Message from serial by manualiti Message from serial by manualiti Message from serial by manualiti	
	Click Open Then Send	SerialSend	AllHigh	Stopbits	1 *	Message from serial by manual!!! Message from serial by manual!!! Message from serial by manual!!!	
LED1: ON OFF	Then Send	SerialClose	CAN Stat		None 👻	Message from serial by manual!!! Message from serial by manual!!! Message from serial by manual!!! Message from serial by manual!!!	
ound		SerialClear	can0 -	CLOS	dtr	Message from serial by manual!!! Message from serial by manual!!! Message from serial by manual!!! Message from serial by manual!!!	 Receives from Pi
AudioLoop Audio	NetWork		cano		-	Message from serial by manual!!! Message from serial by manual!!! Message from serial by manual!!!	
Volume:	NetInfo 4G Enable		CanStart		HEX	Message from serial by manualIII Message from serial by manualIII Message from serial by manualIII Message from serial by manualIII	
Buzzer Enable				ms	200	Message from serial by manual!!! Message from serial by manual!!!	
splay			CanStop	Display wrap		Hello world	
			Board	Send Settings			
Video VideoLoop LCDTest			CS12800RA5101P Ver 5.8.4+gitb8bc	ASCII	HEX 300		_
					Newline Record	Hello world	
				Connected		Sent(bytes): 132	Received(bytes): 10142

Testing Serial Port with Your Workstation

If you're an experienced engineer, you can also use a programming language to test the serial ports, like C, C++, Python, Javascript. They have their libraries for controlling serial port devices.

By the way, serial debugging is enabled (login from serial) by default, you can refer to the Enable/Disable Serial Debug Port section to change the RS232 port to a normal serial port.

CAN Bus

There is one CAN bus on the Raspberry Pi CM5 based Chipsee industrial PC. You can install *can-utils* and use them to test CAN. But you must add one 120Ω resistor between CAN_H and CAN_L on one of the two Boards, as shown on the figure below.

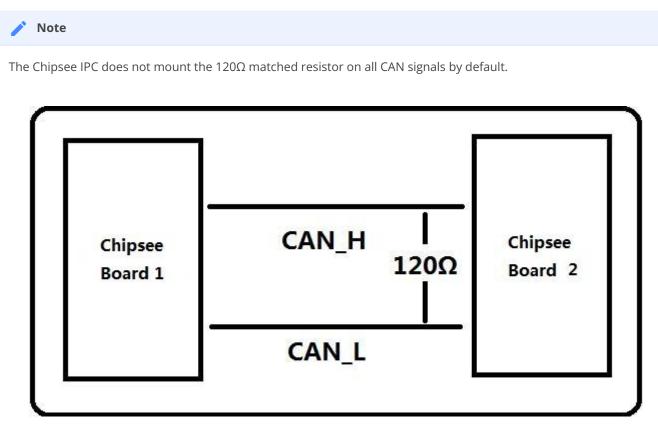



Figure 1065: Connecting CAN

Here are a few examples to test CAN by using CAN units.

• Install can-utils if you haven't.

\$ sudo apt install can-utils

• Set the bit-rate to **1Mbits/sec** and data rate to **8Mbits/sec** using the following command (use ROOT user):

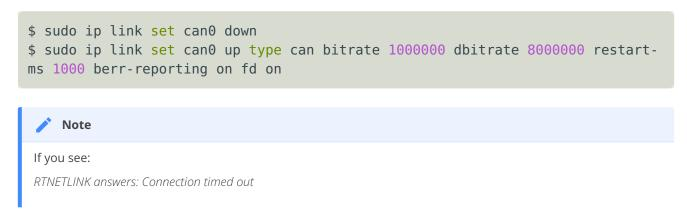

Make sure to mount the 120Ω matched resistor.

• Bring up the device using the command:

\$ sudo ip link set can0 up

Transfer packets

\$ sudo cansend can0 5A1#11.2233.44556677.88

• Receive data from CAN bus

\$ sudo candump can0

• Bring down the device

\$ sudo ip link set can0 down

GPIO

There are 8 GPIOs, 4 output and 4 input. They are all optical isolated. You can control the output or input pin voltage by feeding the VDD_ISO suite voltage. The pin voltage should be from 5V to 24V, while testing we usually use an external power supply to apply to GND_ISO and VDD_SIO.


Refer to the tables below for a detailed port definition for:

- EPC-CM5-070 (CS10600RA5070E)
- PPC-CM5-070 (CS10600RA5070P)
- PPC-CM5-070-D (CS10600RA5070P-D)
- CS-CM5-BOX (CSRA5BOX):
- PPC-CM5-101 (CS12800RA5101P)
- PPC-CM5-133 (CS19108RA5133)
- PPC-CM5-150 (CS10768RA5150)
- PPC-CM5-156 (CS19108RA5156)
- PPC-CM5-170 (CS12102RA5170)
- PPC-CM5-190 (CS12102RA5190)
- PPC-CM5-215 (CS19108RA5215)
- PPC-CM5-236 (CS19108RA5236)

Function	Device Node	GPIOD Chip	GPIOD line
IN4	/dev/chipsee-gpio8	0	27
IN3	/dev/chipsee-gpio7	0	26
IN2	/dev/chipsee-gpio6	0	25
IN1	/dev/chipsee-gpio5	0	24
OUT4	/dev/chipsee-gpio4	0	23
OUT3	/dev/chipsee-gpio3	0	22
OUT2	/dev/chipsee-gpio2	0	19
OUT1	/dev/chipsee-gpio1	0	17
Isolated GND	NC		
Isolated VDD(5V-24V)	NC		

Table 486 GPIO Device Node

For 10.1 inch and above products:

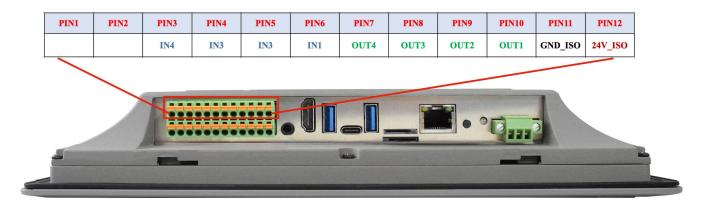

GPIO of PPC-CM5-101 (and above screen size) products

For other 7 inch products and box products, there are silk screen indicating the ports (IN 4,3,2,1 / OUT 4,3,2,1 / GND / VDD) on the product body. You can also check the images of GPIO in the hardware documents of your product.

To control GPIO, you can choose between Chipsee GPIO (default) or gpiod .

Chipsee GPIO

Control *OUT1* by setting it high or low:

```
$ echo 1 > /dev/chipsee-gpio1  # set OUT1 to high
$ echo 0 > /dev/chipsee-gpio1  # set OUT1 to low
```

Get IN1 value:

\$ cat /dev/chipsee-gpio5 # value 1 indicates high, value 0 indicates low

GPIOD

By default the product is set to use Chipsee GPIO, to use libgpiod to control the GPIO, first open */opt/chipsee/chipsee-init.sh* and comment the following lines to disable Chipsee-GPIO:

```
# comment out the following lines in /opt/chipsee/chipsee-init.sh first
# GPI0
# Comment the below code
num=1
nnum=1
if [ "x$OUT" != "x" ]; then
   for i in $OUT; do
    [ ! -d /sys/class/gpio/gpio$i ] && echo $i > /sys/class/gpio/export
    echo out > /sys/class/gpio/gpio$i/direction
    chmod a+w /sys/class/gpio/gpio$i/value
```

```
ln -sf /sys/class/gpio/gpio$i/value /dev/chipsee-gpio$num
  ln -sf /sys/class/gpio/gpio$i/value /dev/gpio-out$nnum
  num=`expr $num + 1`
  nnum=`expr $nnum + 1`
  done
fi
sleep 1
nnum=1
if [ "x$IN" != "x" ]; then
  for i in $IN; do
  [ ! -d /sys/class/gpio/gpio$i ] && echo $i > /sys/class/gpio/export
  echo in > /sys/class/gpio/gpio$i/direction
  chmod a+r /sys/class/gpio/gpio$i/value
  ln -sf /sys/class/gpio/gpio$i/value /dev/chipsee-gpio$num
  ln -sf /sys/class/gpio/gpio$i/value /dev/gpio-in$nnum
  num=`expr $num + 1`
  nnum=`expr $nnum + 1`
  done
fi
# Comment the above code
```

Then reboot the machine to take effect:

reboot to use libgpiod
\$ sudo reboot

The product uses Raspberry Pi CM5 GPIO, you can use *gpioset* and *gpioget* to control them, the GPIOD chip is 0, the GPIOD line is listed in the table above.

Set OUTPUT with GPIOD

For example, to set OUT1 to high, we need to run *gpioset chip line=1* which is *gpioset 0 17=1*, the "17" is the GPIOD line number for OUT1 pin.

```
$ gpioset 0 17=1 # Set OUT1 to high
$ gpioset 0 17=0 # Set OUT1 to low
```

Check INPUT with GPIOD

To check the INPUT level, use *gpioget*. For example, to check the input level for IN4, it is *gpioget chip line* which is *gpioget* 0.27, the "27" is the GPIOD line number for IN4 pin:

```
$ gpioget 0 27 # Gets the input level for IN4
0 # input is low
1 # input is high
```

Other Tools of GPIOD

libgpiod includes several tools that are available in Raspberry Pi OS, such as:

gpiodetect # list gpiochips
gpioinfo # list GPIO lines
gpiomon # wait for edge events on GPIO lines
gpiofind # determine the location of the specific named GPIO

You can search their usage on the Internet if you wish to learn more.

Camera

The camera connector(if your product has one) is compatible with the official Raspberry Pi. Please refer to the following link to learn how to attach a camera: https:// www.raspberrypi.com/documentation/computers/compute-module.html#attach-a-cameramodule

The camera connector uses a 22-pin socket, you can check your product's hardware document to find out the pin definition.

Chipsee-init shell

We use one **chipsee-init.sh** as an initial shell which is placed in /opt/chipsee/chipsee-init.sh .

We initialize the GPIO/Buzzer and other configs in it. If you want to change it, please be careful.

Do a backup first before you modify anything. This script will generaged one log file which is located on /var/log/chipsee-init.sh.log.

If your device has booting issues, you can send Chipsee[®] the file to help you find out what happened.

Flashing an image to the Compute Module

This part is mostly the same as the official Raspberry Pi Compute Module documentation, except that you need to press the "PROG_Button" before supplying power to the device, see details below.

The Chipsee industrial Pi runs on the Raspberry Pi Compute Module, the module has an onboard eMMC. This guide explains how to flash (write) an operating system image to the eMMC storage of the device.

CM5 Lite does not have on-board eMMC. Instead, flash the OS just like a regular Raspberry Pi's TF card (https://www.raspberrypi.com/documentation/computers/getting-started.html#installing-the-operating-system).

Prerequisites

To flash an image, you need the following:

- Download the Latest system image for Chipsee Industrial Pi products
- Another computer, referred to as a host device. You can use Linux (like Raspberry Pi 64bit OS on a regular Pi 4/5, Ubuntu or Debian), Windows 10/11, or macOS.
- A USB-C to USB-C cable; or a USB-C to USB-A cable.

Note

In some cases, USB hubs can prevent the host device from recognising the Compute Module. If your host device does not recognise the Compute Module, try connecting the Compute Module directly to the host device. For more diagnostic tips, see the usbboot troubleshooting guide.

Usbboot

In short, we will run a Raspberry Pi *usbboot* program on the host, it will recognize the Chipsee industrial Pi as a storage. After that we press the PROG button on the device before supplying power, while pressing we plug the power cable, the device will boot as a storage, such that our host's *usbboot* program can recognize it. Let see how to do it in different OS:


For Window

To set up software on a Windows 10/11 host device:

- 1. Download the Windows installer (or, alternatively, build Windows rpiboot from source).
- 2. Double-click on the installer to run it. This installs the drivers and boot tool. Do not close any driver installation windows which appear during the installation process.


Raspberry Pi OS on Raspberry Pi CM5 User Manual

- 3. Reboot Windows.
- 4. Connect the USB-C on the device to your host device.
- 5. Run the *rpiboot* program installed by the Windows installer in the Windows Start menu.

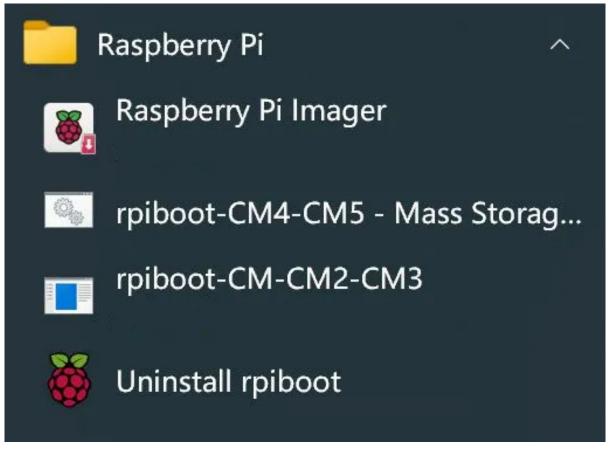

Run the rpiboot-CM4-CM5 program

6. Press and hold the PROG button, then supply power to the device, keep holding the PROG button for 5 seconds, until you see the host machine's command line has new text appearing, then release the button.

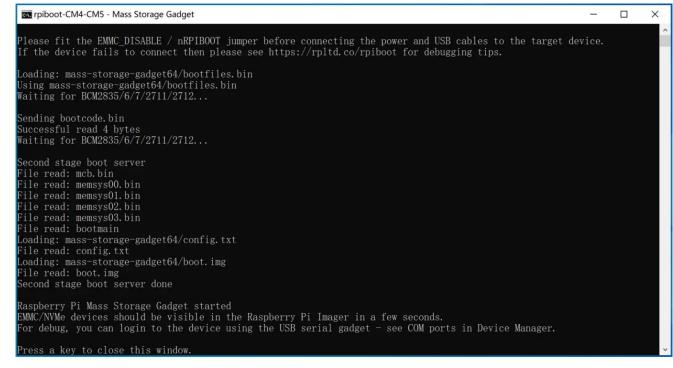

Successfully Configured eMMC as USB mass storage

7. Then you can enter the Flash the eMMC section below.

For Linux

To set up software on a Linux host device:

1. Run the following command to install rpiboot (or, alternatively, build Linux rpiboot from source):

sudo apt install rpiboot

```
Note
Whether or not to build rpiboot from source depends on your OS version, for example, on Ubuntu 24, the
Ubuntu apt source's rpiboot program is outdated, in this case you need to build from source to recognize CM5.
After running rpiboot, if you see: Waiting for BCM2835/6/7/2711... It doesn't have support for BCM2712, then
it can't recognize CM5.
  [finn@ubuntu24:~$ sudo apt install rpiboot
  [[sudo] password for finn:
  Reading package lists... Done
  Building dependency tree... Done
  Reading state information... Done
  The following NEW packages will be installed:
    rpiboot
  0 upgraded, 1 newly installed, 0 to remove and 107 not upgraded.
  Need to get 65.9 MB of archives.
  After this operation, 77.7 MB of additional disk space will be used.
  Get:1 http://archive.ubuntu.com/ubuntu noble/multiverse amd64 rpiboot amd64 0~20
  220315+git6fa2ec0+nowin-0ubuntu1 [65.9 MB]
  Fetched 65.9 MB in 12s (5,454 kB/s)
  Selecting previously unselected package rpiboot.
  (Reading database ... 192144 files and directories currently installed.)
  Preparing to unpack .../rpiboot_0~20220315+git6fa2ec0+nowin-0ubuntu1_amd64.deb .
  Unpacking rpiboot (0~20220315+git6fa2ec0+nowin-0ubuntu1) ...
  Setting up rpiboot (0~20220315+git6fa2ec0+nowin-Oubuntu1) ...
  Processing triggers for man-db (2.12.0-4build2) ...
  [finn@ubuntu24:~$ sudo rpiboot
  RPIBOOT: build-date Jan 31 2022 version 0~20220315+git6fa2ec0+nowin-Oubuntu1
  Waiting for <u>BCM2835/6/7/2711...</u>
                            Just BCM2835/6/7/2711, doesn't support CM5
If you see: Waiting for BCM2835/6/7/2711/2712..., then it supports BCM2712 (CM5).
  finn@ubuntu24:~/Downloads$ cd usbboot/
  finn@ubuntu24:~/Downloads/usbboot$ make
  xxd -i msd/bootcode.bin > msd/bootcode.h
  xxd -i msd/start.elf > msd/start.h
  xxd -i msd/bootcode4.bin > msd/bootcode4.h
  cc -Wall -Wextra -g -o rpiboot main.c bootfiles.c decode_duid.c `pkg-config --cfla
  gs --libs libusb-1.0` -DGIT_VER="\"ecfb7222\"" -DPKG_VER="\"local\"" -DBUILD_DATE="\
  "2025/04/22\"" -DINSTALL_PREFIX=\"/usr\"
  finn@ubuntu24:~/Downloads/usbboot$ sudo ./rpiboot -d mass-storage-gadget64
  RPIBOOT: build-date 2025/04/22 pkg-version local ecfb7222
  Please fit the EMMC_DISABLE / nRPIBOOT jumper before connecting the power and USB ca
  bles to the target device.
  If the device fails to connect then please see https://rpltd.co/rpiboot for debuggin
  g tips.
  Loading: mass-storage-gadget64/bootfiles.bin
  Using mass-storage-gadget64/bootfiles.bin
  Waiting for BCM2835/6/7/2711/2712...
  Sending bootcode.bin
  Successful read 4 bytes
  Waiting for BCM2835/6/7/2711/2712...
  Second stage boot server
  File read: mcb.bin
  File read: memsys00.bin
  File read: memsys01.bin
  File read: memsys02.bin
  File read: memsys03.bin
  File read: bootmain
  Loading: mass-storage-gadget64/config.txt
  File read: config.txt
  Loading: mass-storage-gadget64/boot.imgpc
                                                                                     Page 53 of 62
  File read: boot.img
```

```
Chipsee
```

Second stade hoot

war done

- 2. Connect the USB-C on the device to your host device.
- 3. Then, run rpiboot:

sudo rpiboot # if using OS apt source

sudo ./rpiboot -d mass-storage-gadget64 # if you built from source

You should see:

```
Loading: mass-storage-gadget64/bootfiles.bin
Using mass-storage-gadget64/bootfiles.bin
Waiting for BCM2835/6/7/2711/2712...
```

- 4. Press and hold the PROG button, then supply power to the device, keep holding the PROG button for 5 seconds, until you see the host machine's command line has new text appearing, then release the button.
- 5. After a few seconds, the Compute Module should appear as a mass storage device. You can see a *bootfs, rootfs* appear in Ubuntu Files sidebar like a external storage. Alternatively, run **Isblk** and search for a device with a storage capacity that matches the capacity of your Compute Module.

finn@ubunt	u 24:~ \$ lsł	olk				
NAME	MAJ:MIN	RM	SIZE	RO	TYPE	MOUNTPOINTS
loop0	7:0	0	4K	1	loop	/snap/bare/{
loop1	7:1	0	73.9M	1	loop	/snap/core2:
loop2	7:2	0	73.9M	1	loop	/snap/core2:
loop3	7:3	0	258M	1	loop	/snap/firef
loop4	7:4	0	242M	1	loop	/snap/firef
loop5	7:5	0	11.1M	1	loop	/snap/firmw;
loop6	7:6	0	516M	1	loop	/snap/gnome-
loop7	7:7	0	91.7M	1	loop	/snap/gtk-co
loop8	7:8	0	10.8M	1	loop	/snap/snap-:
loop9	7:9	0	10.8M	1	loop	/snap/snap-:
loop10	7:10	0	44 . 4M	1	loop	/snap/snapd,
loop11	7:11	0	44 . 4M	1	loop	/snap/snapd,
loop12	7:12	0	568K	1	loop	/snap/snapd-
sda	8:0	0	238.5G	0	disk	
-sda1	8:1	0	1G	0	part	/boot/efi
L_sda2	8:2	0	237.4G	0	part	/
sdb	8:16	1	29.1G	0	disk	
—sdb1	8:17	1	512M	0	part	
└—sdb2	8:18	1	28.6G	0	part	

A 32GB eMMC appears as /dev/sdb

6. Then you can enter the Flash the eMMC section below.

For MacOS

To set up software on a macOS host device:

- 1. First, build macOS rpiboot from source.
- 2. Connect the USB-C on the device to your host device.
- 3. Then, run the *rpiboot* executable with the following command:

```
$ sudo ./rpiboot -d mass-storage-gadget64
# this command might change in the future, check the Github repo's macOS
section for the latest information
```

You should see:

```
Loading: mass-storage-gadget64/bootfiles.bin
Using mass-storage-gadget64/bootfiles.bin
Waiting for BCM2835/6/7/2711/2712...
```

- 4. Press and hold the PROG button, then supply power to the device, keep holding the PROG button for 5 seconds, until you see the host machine's command line has new text appearing, then release the button.
- 5. You should see:

```
Waiting for BCM2835/6/7/2711/2712...
Sending bootcode.bin
Successful read 4 bytes
Waiting for BCM2835/6/7/2711/2712...
Second stage boot server
File read: mcb.bin
File read: memsys00.bin
File read: memsys01.bin
File read: memsys02.bin
File read: memsys03.bin
File read: bootmain
Loading: mass-storage-gadget64/config.txt
File read: config.txt
Loading: mass-storage-gadget64/boot.img
File read: boot.img
Second stage boot server done
```

6. When the command finishes running, you should see a *bootfs* disk in Finder. Your Compute Module should now appear as a mass storage device.

• •	< > bootfs	$\equiv \diamond$	
vorites	Name	 Date Modified 	Size Kind
AirDrop	bcm2710-rpi-2-b.dtb	Jan 27, 2025 at 5:19 PM	33 KB Document
Applications	bcm2710-rpi-3-b-plus.dtb	Jan 27, 2025 at 5:19 PM	35 KB Document
Desktop	bcm2710-rpi-3-b.dtb	Jan 27, 2025 at 5:19 PM	35 KB Document
Desktop	bcm2710-rpi-cm3.dtb	Jan 27, 2025 at 5:19 PM	32 KB Document
Code	bcm2710-rpi-zero-2-w.dtb	Jan 27, 2025 at 5:19 PM	34 KB Document
Music	bcm2710-rpi-zero-2.dtb	Jan 27, 2025 at 5:19 PM	34 KB Document
Desuments	bcm2711-rpi-4-b.dtb	Jan 27, 2025 at 5:19 PM	56 KB Document
Documents	bcm2711-rpi-400.dtb	Jan 27, 2025 at 5:19 PM	56 KB Document
Downloads	bcm2711-rpi-cm4-io.dtb	Jan 27, 2025 at 5:19 PM	38 KB Document
	bcm2711-rpi-cm4.dtb	Jan 27, 2025 at 5:19 PM	57 KB Document
ations	bcm2711-rpi-cm4s.dtb	Jan 27, 2025 at 5:19 PM	53 KB Document
bootfs 🔺	bcm2712-rpi-5-b.dtb	Jan 27, 2025 at 5:19 PM	81 KB Document
Network	bcm2712-rpi-500.dtb	Jan 27, 2025 at 5:19 PM	81 KB Document
Wetwork	bcm2712-rpi-cm5-cm4io.dtb	Jan 27, 2025 at 5:19 PM	82 KB Document
S	bcm2712-rpi-cm5-cm5io.dtb	Jan 27, 2025 at 5:19 PM	82 KB Document
Red	bcm2712-rpi-cm5l-cm4io.dtb	Jan 27, 2025 at 5:19 PM	82 KB Document
Nou	bcm2712-rpi-cm5l-cm5io.dtb	Jan 27, 2025 at 5:19 PM	82 KB Document
Orange		1 07 0005 -+ 5:40 DH	04 KD Designed

Flash the eMMC

After the device's eMMC has been detected as a USB mass storage, you can use Raspberry Pi Imager or Balena Etcher to flash an operating system image to a Compute Module.

- First decompress the xxx-raspios-chipsee-xxx .img.xz file (around 1GB) you downloaded before, the decompressed xxx-raspios-chipsee-xxx .img file should be around 6GB (with desktop) in file size.
- 2. Use either Raspberry Pi Imager or Balena Etcher:
 - If using Raspberry Pi Imager, select *Raspberry 5 / Compute Module 5* in Device; select *Use custom -> choose the decompressed .img file* in Operating System; select the appeared *mmcblk0 (bootfs)* in Storage.



	Raspberry Pi Imager v1.8.5	_ 🗆 X
8	Raspberry Pi	
Raspb	Use OS customisation? X	
RAS	Would you like to apply OS customisation settings?	UL
	EDIT SETTINGS NO, CLEAR SETTINGS YES NO	
	NEXT	

Clear Settings and Select No Customization Unless You Need Customization

	Raspberry Pi	
	Write Successful X	(
aspbe	2025-02-12-raspios-bookworm-arm64-chipsee-v2.img has been written to mmcblk0 Media You can now remove the SD card from the reader	
	NEXT	

Successfully Flash OS with Raspberry Pi Imager

• If using Balena Etcher, choose *Flash from File* and select the decompress **.img** file; select the appeared *mmcblk0* (or similar capacity of your Compute Module) in *Select Target*, click *Flash!*.


•••	balena Etcher	* 3 - 4
2025-02-12-raspios-bookworm-arm64-chipsee-v2.img		
2025-02-1ee-v2.img	mmcblk0 Media	Flash!
Cancel		
6.17 GB		


3. At last, reboot the device. It could take a few minutes in the first boot, now you have a brand new Raspberry Pi OS.

FAQ

How to rotate the screen?


Click top left menu, Preferences -> Screen Configuration. Then right click (or long press if using touch screen) HDMI-A-1 grey area, Choose orientation, then select the rotate option. The touchscreen will be rotated along with the display.

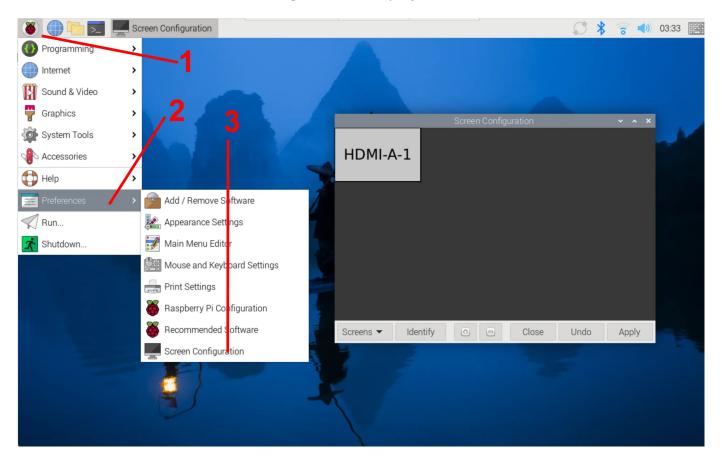


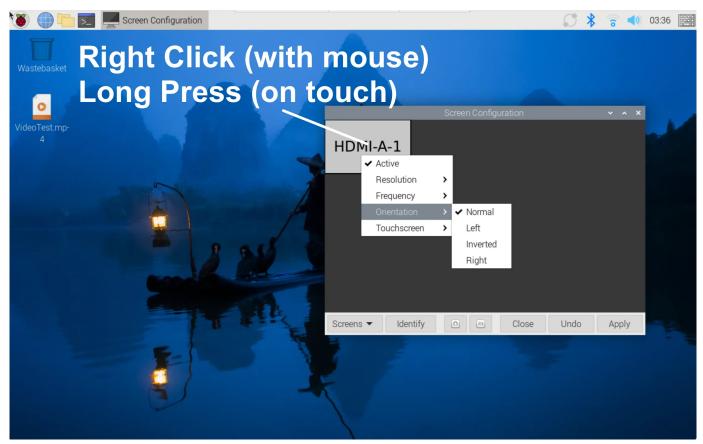

How to enable the on screen virtual keyboard?

Select Raspberry Pi Configuration, choose "Display", in On-screen keyboard, select "Enabled Always", then click OK to save.

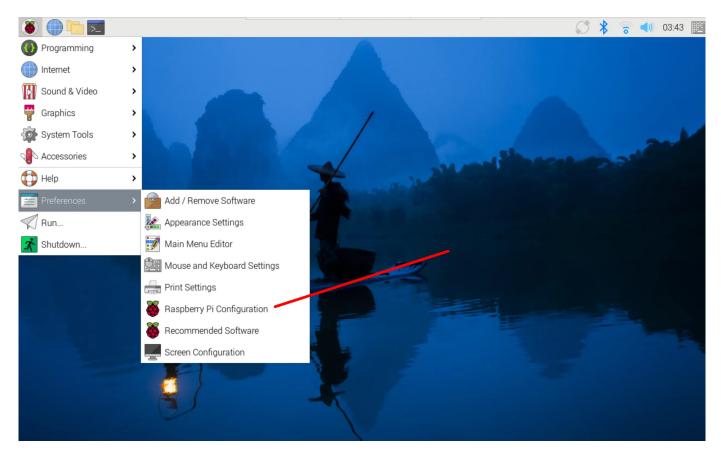

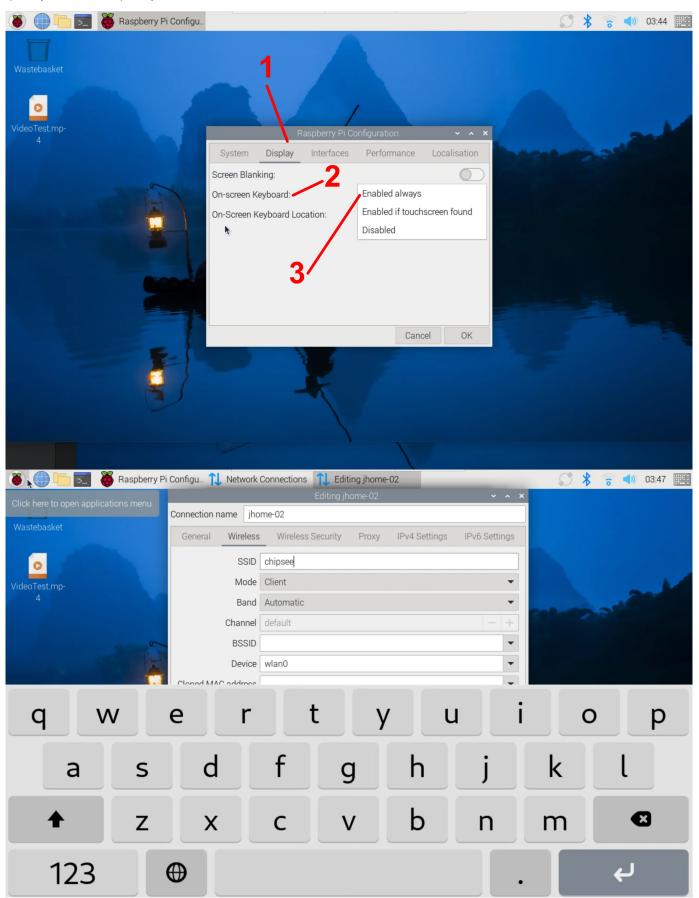

The keyboard will automatically pop up when entering text.

Disclaimer

This document is provided strictly for informational purposes. Its contents are subject to change without notice. Chipsee assumes no responsibility for any errors that may occur in this document. Furthermore, Chipsee reserves the right to alter the hardware, software, and/or specifications set forth herein at any time without prior notice and undertakes no obligation to update the information contained in this document.

While every effort has been made to ensure the accuracy of the information contained herein, this document is not guaranteed to be error-free. Further, it does not offer any warranties or conditions, whether expressed orally or implied in law, including implied warranties and conditions of merchantability or fitness for a particular purpose. We specifically disclaim any liability with respect to this document, and no contractual obligations are formed either directly or indirectly by this document.

Despite our best efforts to maintain the accuracy of the information in this document, we assume no responsibility for errors or omissions, nor for damages resulting from the use of the information herein. Please note that Chipsee products are not authorized for use as critical components in life support devices or systems.

Technical Support

If you encounter any difficulties or have questions related to this document, we encourage you to refer to our other documentation for potential solutions. If you cannot find the solution you're looking for, feel free to contact us. Please email Chipsee Technical Support at **support@chipsee.com**, providing all relevant information. We value your queries and suggestions and are committed to providing you with the assistance you require.